


# UNITARY EQUIPMENT WARRANTY INFO

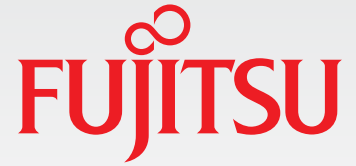

**IMPORTANT NOTE: THIS IS A REFERENCE GUIDE ONLY. ALL OFFICIAL WARRANTY DOCUMENTS SUPERSEDE THIS GUIDE. PLEASE REFER TO THEM FOR DETAILED INFORMATION.**

MODEL	PARTS				COMPRESSOR				HEAT EXCHANGER			
	W/ REGISTRATION		W/O REGISTRATION		W/ REGISTRATION		W/O REGISTRATION		W/ REGISTRATION		W/O REGISTRATION	
	RES.	COM.	RES.	COM.	RES.	COM.	RES.	COM.	RES.	COM.	RES.	COM.
<b>GAS FURNACES</b>												
FF***PS80	10	1	5	1	-	-	-	-	20	10	20	10
FF***PS80X	10	1	5	1	-	-	-	-	20	10	20	10
FF***HS80	10	1	5	1	-	-	-	-	20	10	20	10
FF***HS80X	10	1	5	1	-	-	-	-	20	10	20	10
FF***CS80	10	1	5	1	-	-	-	-	20	10	20	10
FF***CS80X	10	1	5	1	-	-	-	-	20	10	20	10
FF***TS80	10	1	5	1	-	-	-	-	20	10	20	10
FF***TS80X	10	1	5	1	-	-	-	-	20	10	20	10
FF***HT80	10	1	5	1	-	-	-	-	20	10	20	10
FF***HT80X	10	1	5	1	-	-	-	-	20	10	20	10
FF***TT80	10	1	5	1	-	-	-	-	20	10	20	10
FF***TT80X	10	1	5	1	-	-	-	-	20	10	20	10
FF***LT80	10	1	5	1	-	-	-	-	LIFETIME	10	LIFETIME	10
FF***LT80X	10	1	5	1	-	-	-	-	LIFETIME	10	LIFETIME	10
FF***PS92	10	1	5	1	-	-	-	-	20	10	20	10
FF***TS92	10	1	5	1	-	-	-	-	LIFETIME	10	LIFETIME	10
FF***PS95	10	1	5	1	-	-	-	-	LIFETIME	10	LIFETIME	10
FF***TS95	10	1	5	1	-	-	-	-	LIFETIME	10	LIFETIME	10
FF***PT96	10	1	5	1	-	-	-	-	LIFETIME	10	LIFETIME	10
FF***TT96	10	1	5	1	-	-	-	-	LIFETIME	10	LIFETIME	10
FF***LT96	10	1	5	1	-	-	-	-	LIFETIME	10	LIFETIME	10
FF***LM97	10	1	5	1	-	-	-	-	LIFETIME	10	LIFETIME	10
FF***LM98	10	1	5	1	-	-	-	-	LIFETIME	10	LIFETIME	10
<b>AIR HANDLERS</b>												
FB**TTS	10	1	5	1	-	-	-	-	-	-	-	-
FH**TLT	10	1	5	1	-	-	-	-	-	-	-	-
FH**TPS	10	1	5	1	-	-	-	-	-	-	-	-
FH**TTS	10	1	5	1	-	-	-	-	-	-	-	-
FH**TTT	10	1	5	1	-	-	-	-	-	-	-	-
FH*ELV	10	1	5	1	-	-	-	-	-	-	-	-
FR**TTS	10	1	5	1	-	-	-	-	-	-	-	-
<b>AIR CONDITIONERS</b>												
FO*13C	10	1	5	1	10	5	5	5	-	-	-	-
FO*14C	10	1	5	1	10	5	5	5	-	-	-	-
FO*16C	10	1	5	1	10	5	5	5	-	-	-	-
FO*17C (N)	10	1	5	1	10	5	5	5	-	-	-	-
FO*17C (C)	10	1	5	1	10	5	5	5	-	-	-	-
FO*20C	10	1	5	1	10	5	5	5	-	-	-	-

Continued on reverse →

**IMPORTANT NOTE: THIS IS A REFERENCE GUIDE ONLY. ALL OFFICIAL WARRANTY DOCUMENTS SUPERSEDE THIS GUIDE. PLEASE REFER TO THEM FOR DETAILED INFORMATION.**

MODEL	PARTS				COMPRESSOR				HEAT EXCHANGER			
	W/ REGISTRATION		W/O REGISTRATION		W/ REGISTRATION		W/O REGISTRATION		W/ REGISTRATION		W/O REGISTRATION	
	RES.	COM.	RES.	COM.	RES.	COM.	RES.	COM.	RES.	COM.	RES.	COM.
<b>HEAT PUMPS</b>												
FO*14R	10	1	5	1	10	5	5	5	-	-	-	-
FO*15R	10	1	5	1	10	5	5	5	-	-	-	-
FO*16R	10	1	5	1	10	5	5	5	-	-	-	-
FO*20R	10	1	5	1	10	5	5	5	-	-	-	-
<b>INDOOR COILS</b>												
FCC (TXV)	10	1	5	1	-	5	-	-	-	-	-	-
FCC (EEV)	10	1	5	1	-	5	-	-	-	-	-	-
<b>RESIDENTIAL PACKAGE PRODUCT</b>												
RSPM	10	1	5	1	10	5	5	5	-	-	-	-
RACA	10	1	5	1	10	5	5	5	-	-	-	-
RGEA	10	1	5	1	10	5	5	5	10 (A)	10 (B)	10 (A)	10 (B)
RQPM	10	1	5	1	10	5	5	5	-	-	-	-
RQRM	10	1	5	1	10	5	5	5	-	-	-	-
RQPL	10	1	5	1	10	5	5	5	-	-	-	-
RQPW	10	1	5	1	10	5	5	5	10 (A)	10 (B)	10 (A)	10 (B)
RLPN	-	1	-	1	-	5	-	5	-	10 (B)	-	10 (B)
RLQN	-	1	-	1	-	5	-	5	-	10 (B)	-	10 (B)
RLKN	-	1	-	1	-	5	-	5	-	10 (B)	-	10 (B)
RGECZR	-	1	-	1	-	5	-	5	-	-	-	-
RACDZR	-	1	-	1	-	5	-	5	-	-	-	-
RACDZS	-	1	-	1	-	5	-	5	-	-	-	-
RACDZT	-	1	-	1	-	5	-	5	-	-	-	-
RLNL	-	1	-	1	-	5	-	5	-	-	-	-
RLRL	-	1	-	1	-	5	-	5	-	-	-	-
RKPN	-	1	-	1	-	5	-	5	-	10 (B)	-	10 (B)
RKQN	-	1	-	1	-	5	-	5	-	10 (B)	-	10 (B)
RKKN	-	1	-	1	-	5	-	5	-	10 (B)	-	10 (B)
RGEDZR	-	1	-	1	-	5	-	5	-	10 (B)	-	10 (B)
RGEDZS	-	1	-	1	-	5	-	5	-	10 (B)	-	10 (B)
RGEDZT	-	1	-	1	-	5	-	5	-	10 (B)	-	10 (B)
RKNL	-	1	-	1	-	5	-	5	-	10 (B)	-	10 (B)
RKRL	-	1	-	1	-	5	-	5	-	10 (B)	-	10 (B)
RJPL	-	1	-	1	-	5	-	5	-	10 (B)	-	10 (B)
RJNL	-	1	-	1	-	5	-	5	-	-	-	-
RHPDZR	-	1	-	1	-	5	-	5	-	-	-	-
RHPDZS	-	1	-	1	-	5	-	5	-	-	-	-
RHPDZT	-	1	-	1	-	5	-	5	-	-	-	-
RAWL	-	1	-	1	-	5	-	5	-	-	-	-
RHGL	-	1	-	1	-	-	-	-	-	-	-	-
RPWL	-	1	-	1	-	5	-	5	-	-	-	-
RHGM	-	1	-	1	-	-	-	-	-	-	-	-

(A) If optional stainless steel heat exchanger is selected, Warranty upgrades to Lifetime  
 (B) If optional stainless steel heat exchanger is selected, Warranty upgrades to 20 years